# PAC-YT52CRA (MA)

### SIMPLE REMOTE CONTROLLER

#### Dual set point

When the operation mode is set to the Auto (dual set point) mode, two preset temperatures (one each for cooling and heating) can be set. Depending on the room temperature, indoor unit will automatically operate in either the Cool or Heat mode and keep the room temperature within the preset range.

\*Please contact your Mitsubishi Electric sales office for details.

#### Backlit LCD (Liquid Crystal Display)

Large, easy-to-see display. Full-dot LCD display with large characters for easy viewing Contrast also adjustable.

#### Flat back

Install without hole on wall Slim and flat type Thickness is less than 14.5mm.

#### Vane button (standard)

The Vane button has been added to allow the user to change airflow direction (ceiling-cassette and wall-mounted types).

Pressing the **I** button will switch the vane directions.



\*The settable vane direction varies depending on the Indoor Unit Model to be connected.

\* If the unit has no vane function, the vane direction cannot be set In this

case, the vane icon blinks when the  $\boxed{3}$  button is pressed.

- » The only wiring required is cross-over wiring based on two-wire signal lines.
- » Room temperature sensors are built-in.
- » Can operate all types of indoor units.

 
**Functions** 

- \*Since this controller has limited functions, it should always be Used in conjunction with standard controller or centralised controller.
- » LCD temperature setting and display in 1°C increments.

## DUAL SET POINT

H 120 x W 70 x D 14.5mm

#### System structure



#### □: Each unit O: Each group ×: Not Available

Item	Description	Operations	Display
ON/OFF	Changes between ON and OFF.	0	0
Operation Mode Switching	Select from COOL, DRYING, FAN, AUTO, and HEAT. * AUTO mode is settable only when those functions are available on the indoor unit.	0	0
Temperature Setting	Changes the set temperature. * Set temperature range varies depending on the indoor unit model.	0	0
Fan Speed Setting	Changes the fan speed. * The settable fan speed varies depending on the Indoor Unit Model to be connected	0	0
Permit/Prohibit Local Operation	By setting a centralised controller, the following local operations are prohibited: ON/OFF; operation mode; preset temperature; * The CENTRAL icon appears while the local operations are prohibited.	×	0
Error	Displays the current error status with the address. * The address may not be displayed depending on the error status.	×	
Ventilation Equipment	When the CITY MULTI indoor unit is connected, interlocked setting of the CITY MULTI LOSSNAY unit is possible. When the Mr. SLIM indoor unit (A-control) is connected, interlocked operation of the microcomputer-type LOSSNAY unit is possible.	0	0
Set Temperature Range Limit	The preset temperature range can be restricted for each operation mode (COOL/HEAT/AUTO).	0	0