
 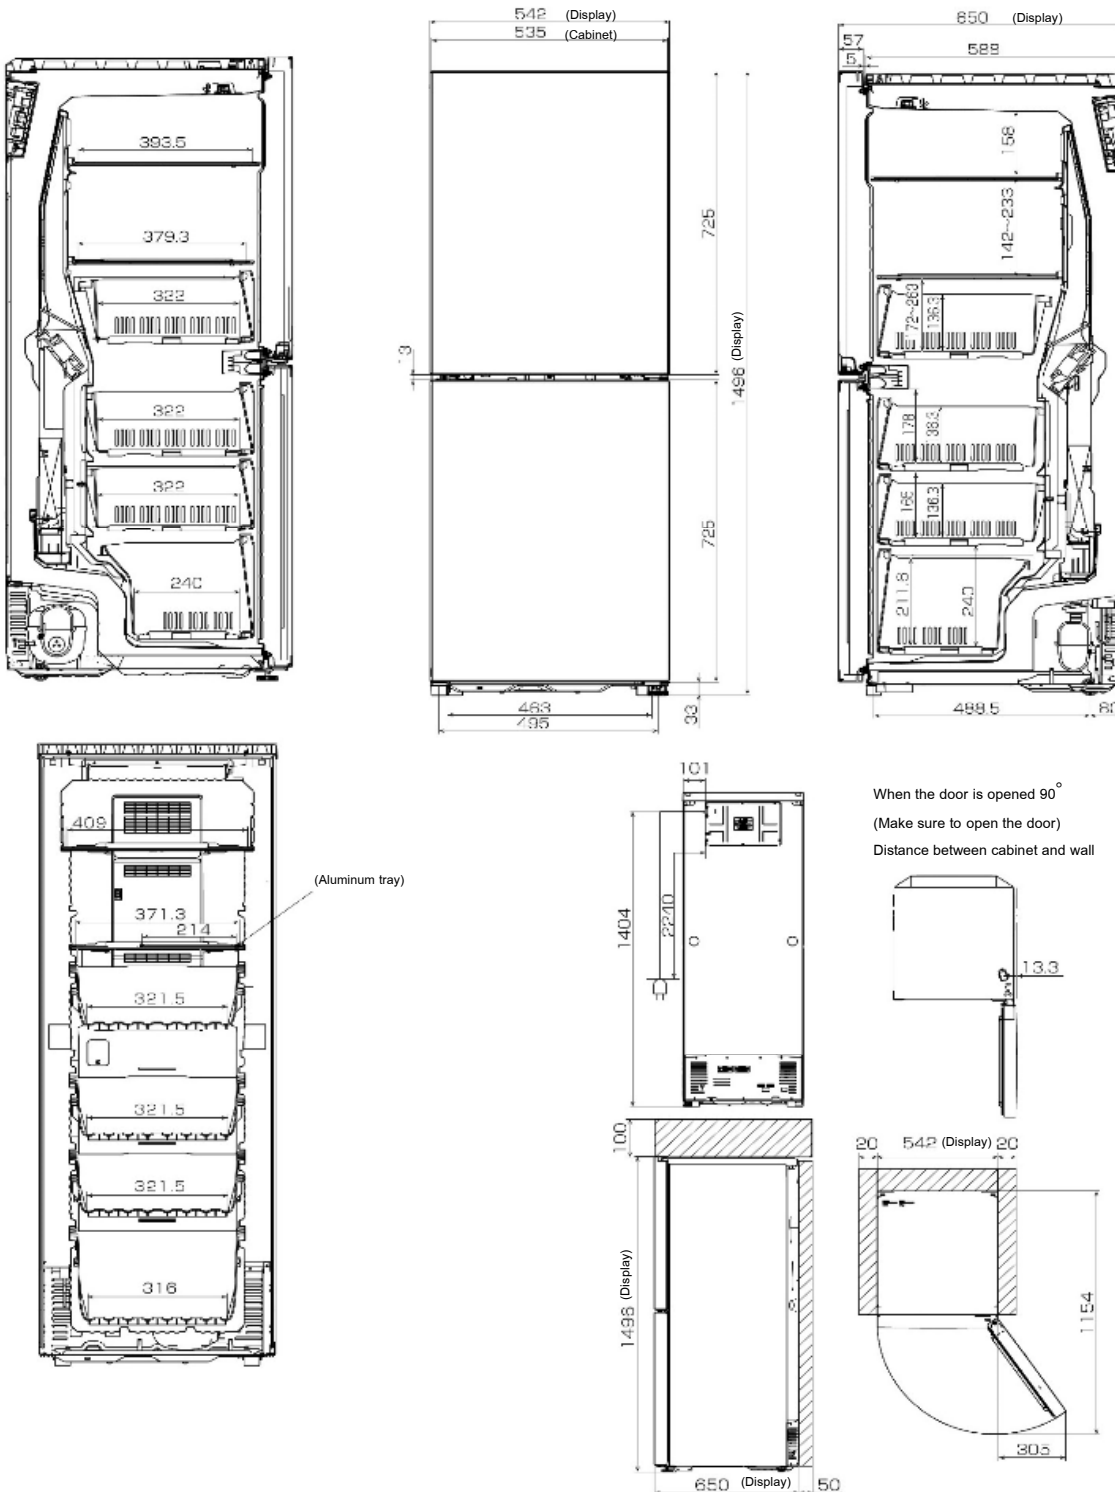


MF-U218ET-A

Unit : mm



When installed on the wall, if the freezer door cannot be opened sufficiently,
A space of at least 30mm from the wall is required.
 is the minimum installation space and is different from the measurement conditions for annual power consumption.
 Please allow approximately 10mm of space as the actual value may differ slightly depending on the installation conditions.